

All models

Torque specifications

Wheel bolts M12 x 1.5
(All models except 140)



Nm

110

Wheel bolts M14 x 1.5
(Model 140 only)

150

Special tools

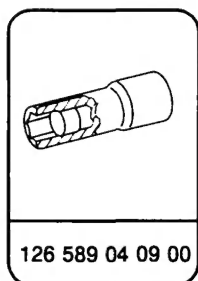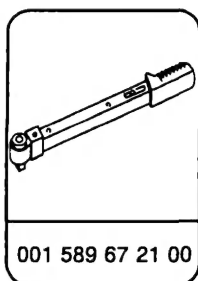

- Remove wheel covers from steel wheels, if so equipped.
- Always tighten wheel bolts with torque wrench.
- **Torque in correct sequence (arrows).**
- Replace wheel covers on steel wheels.

